

About the 5804WATCH Security Watch

The 5804WATCH Security Watch combines a fully functional digital timepiece with a portable wireless transmitter for controlling your security system.

IMPORTANT!


This product works with wireless alarm systems supporting 5881EN (or equivalent high-security mode) receivers ONLY.

PROGRAMMING SECURITY WATCH INTO SECURITY SYSTEM CONTROL PANEL

Two enrollment methods are supported for this wireless device: Standard Enrollment Mode and High Security Mode. In the Standard Enrollment Mode, the device's serial number is programmed into the Control Panel (as described in the Control Panel's instructions.) Using the optional High Security Mode, the device is enrolled via a transmission sequence.

Enrolling Security Watch using Standard Mode

Each Security Watch is assigned a unique serial number during manufacture. Each button on the unit has a distinct "Loop" number (shown below) that you must program into the control panel during installation.

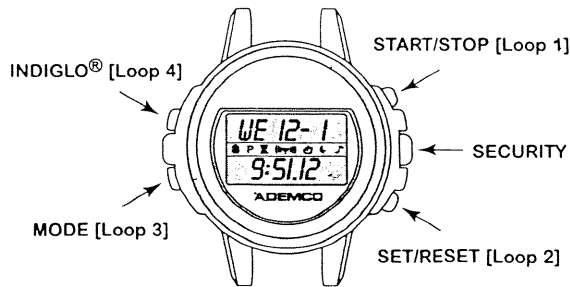

NOTE: For complete details on how to program the Security Watch transmitter's serial number at the control panel, see the Control Panel's installation instructions.

Assign each button to an individual zone and designate the Input Type as "BR" (Button Type RF).

When prompted for the device serial number...

- Activate the Loop you are programming (SECURITY button then Loop button), then...
- WAIT approximately 4 seconds, then...
- Activate the same function (SECURITY button then Loop button).

You may also enter the serial number manually through the keypad.

NOTE: Be sure to hold Loop button for at least 1 second to positively activate the transmitter.

SECURITY WATCH SETUP & PROGRAMMING FLOW CHART

Refer to the programming example below, and the Table of Security Commands, to program the desired Security Watch functions.


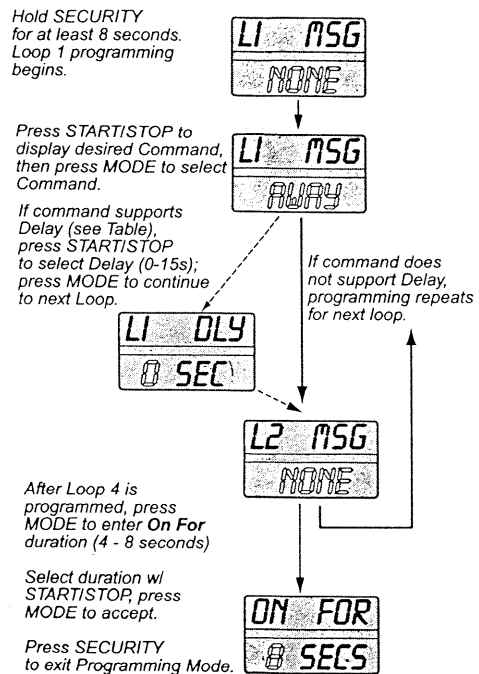


Table of Security Commands

Command	Abbreviation	Delay?
NONE	NONE	
AWAY	AWY	✓
STAY	STY	✓
ON	ON	✓
OFF	OFF	✓
PANIC	PAN	
POLICE	POL	
MEDICAL	MED	
FIRE	FIR	
LOCK	LOK	✓
UNLOCK	UNL	✓
LIGHT	LIT	✓
DOOR	DDR	✓
ACCESSORY	ACC	✓

**Installation/
Setup Instructions**

807-095003

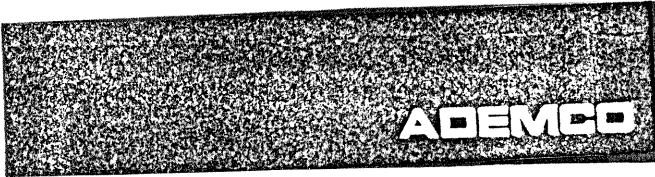

5804WATCH OPERATION MODES

The 5804WATCH operation modes are accessed by pressing the MODE button located on the lower left side of the watch. The modes appear in this order, on each press of the MODE button:

- Time/Date
- Alarm Clock
- Countdown Timer
- Chronograph (Stopwatch)

NOTE: Refer to the 5804WATCH User's Guide for complete operational instructions.

Enrolling Security Watch in High-Security Mode (Optional)

You can program the Security Watch directly into a 5881EN (or equivalent high-security mode) receiver, using this optional method:

1. After programming the watch in the control panel, exit programming mode and wait 60 seconds.
2. Put the system in Go/No Go mode (refer to the Control Panel instructions for the specific method.)
3. Press red SECURITY button on the Security Watch to enter Security Mode.
4. Press all 4 Loop buttons on the watch at the same time and hold for 3 seconds. The watch beeps and displays SYNC SENT; the control panel (or receiver) beeps to indicate successful receipt.
5. At the Control Panel, exit from Go/No Go mode (user code + 1 [OFF]).

SECURITY WATCH SETUP & PROGRAMMING PROCEDURE

IMPORTANT!

Programmed Watch Functions Do Not Determine Security System Functionality!

5804WATCH programming simply sets up the watch so that *the named function of each button corresponds to the function previously programmed into the Control Panel*. In other words, the watch programming does NOT determine the security system function!

Loop functions are determined when programming the wireless device into the security system Control Panel, so that, for example, Loop 1 (START/STOP on Security Watch) triggers the ARM AWAY function. Regardless of the function name programmed for the START/STOP button, the button will always trigger an ARM AWAY command.

While programming the Security Watch, refer to the Setup & Programming flow-chart diagram, and the Table of Security Commands.

1. Press the red Security button for at least eight seconds. The display for Loop 1 (Start/Stop) appears.
2. Press START/STOP until the desired message appears (see the table to the right for available messages, abbreviations on the LCD, and command delay possibilities).
3. Press MODE (lower left of the watch) to accept the displayed Command. Depending on the message selected, either a screen for setting the next Loop, or a screen to set a delay for that message will appear (indicated by dashed lines on diagram).

Note: Delay is the duration between triggering the Security command and having the watch actually transmit the command.
4. If a delay is desired for a message, select duration (between 0 and 15 seconds) by using the START/STOP button. (The default delay is 0.) Press MODE to continue to the next Loop.
5. Repeat steps 2 through 4 to program Loops 2, 3, and 4 in the same manner as Loop 1.

Note: You must program all four Loops on the watch. If you do not desire a function for a particular loop, set the function to "NONE".
6. After programming Loop 4, enter the On For duration; which represents the amount of time the watch stays in Security Mode after pressing the SECURITY button (between 4 and 8 seconds).
7. When finished, press SECURITY to exit.

BATTERY REPLACEMENT

The battery used in this product should provide reliable operation for over one year of normal use. Please note that battery life is dependent on the customer's actual usage. The transmitter detects low battery level, and will report this warning to the control panel, thus allowing the dealer or user to arrange battery replacement. Wireless functions should be periodically exercised, since the 5804WATCH cannot report a low battery situation unless a command is transmitted.

Battery replacement should be done by a local watch retailer or jeweler.

ADEMCO LIMITED WARRANTY

Alarm Device Manufacturing Company, a Division of Pittway Corporation, and its divisions, subsidiaries and affiliates ("Seller"), 165 Eileen Way, Syosset, New York 11791, warrants its products to be in conformance with its own plans and specifications and to be free from defects in materials and workmanship under normal use and service for 24 months from the date stamp control on the product or, for products not having an ADEMCO date stamp, for 12 months from date of original purchase unless the installation instructions or catalog sets forth a shorter period, in which case the shorter period shall apply. Seller's obligation shall be limited to repairing or replacing, at its option, free of charge for materials or labor, any product which is proved not in compliance with Seller's specifications or proves defective in materials or workmanship under normal use and service. Seller shall have no obligation under this Limited Warranty or otherwise if the product is altered or improperly repaired or serviced by anyone other than ADEMCO factory service. For warranty service, return product transportation prepaid, to ADEMCO Factory Service, 165 Eileen Way, Syosset, New York 11791.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IN NO CASE SHALL SELLER BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, OR UPON ANY OTHER BASIS OF LIABILITY WHATSOEVER, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT. Seller does not represent that the products it sells may not be compromised or circumvented; that the products will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; or that the products will in all cases provide adequate warning or protection. Customer understands that a properly installed and maintained alarm may only reduce the risk of a burglary, robbery, fire or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss as a result. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. HOWEVER, IF SELLER IS HELD LIABLE, WHETHER DIRECTLY OR INDIRECTLY, FOR ANY LOSS OR DAMAGE ARISING UNDER THIS LIMITED WARRANTY OR OTHERWISE, REGARDLESS OF CAUSE OR ORIGIN, SELLER'S MAXIMUM LIABILITY SHALL NOT IN ANY CASE EXCEED THE PURCHASE PRICE OF THE PRODUCT, WHICH SHALL BE THE COMPLETE AND EXCLUSIVE REMEDY AGAINST SELLER. This warranty replaces any previous warranties and is the only warranty made by Seller on this product. No increase or alteration, written or verbal, of the obligations of this Limited Warranty is authorized.

FCC Compliance Information

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC ID: EP9001