

DIP SWITCH TABLES FOR 5700 RF SYSTEM WIRELESS DEVICES

HOUSE ID SWITCH SETTING FOR ALL DEVICES EXCEPT 5716

DEVICE ID	DIP SWITCH POSITION				
	1	2	3	4	5
1	UP	UP	UP	UP	—
2	UP	UP	UP	—	UP
3	UP	UP	UP	—	—
4	UP	UP	—	UP	UP
5	UP	UP	—	—	UP
6	UP	UP	—	—	—
7	UP	UP	—	—	UP
8	UP	—	UP	UP	UP
9	UP	—	UP	UP	—
10	UP	—	UP	—	UP
11	UP	—	UP	—	—
12	UP	—	—	UP	UP
13	UP	—	—	UP	—
14	UP	—	—	—	UP
15	UP	—	—	—	—
16	—	UP	UP	UP	UP
17	—	UP	UP	UP	—
18	—	UP	UP	—	UP
19	—	UP	UP	—	—
20	—	UP	—	UP	UP
21	—	UP	—	UP	—
22	—	—	UP	—	UP
23	—	—	UP	—	—
24	—	—	UP	UP	UP
25	—	—	UP	UP	—
26	—	—	—	UP	UP
27	—	—	—	UP	—
28	—	—	—	UP	UP
29	—	—	—	UP	—
30	—	—	—	—	UP
31	—	—	—	—	—

BIT VALUE: 16 8 4 2 1

5701 PANIC TRANSMITTER

HOUSE ID (1 SHOWN)

POS. 6 UP = XMTR ID 62
DN = XMTR ID 63

5706/5707 SMOKE DETECTOR TRANSMITTER

HOUSE ID (1 SHOWN)

XMTR ID (48 SHOWN)

XMTR ID	6	7	8
48	UP	UP	UP
49	UP	UP	—
50	UP	—	UP
51	UP	—	—
52	—	UP	UP
53	—	UP	—
54	—	—	UP
55	—	—	—

5775 PIR DETECTOR TRANSMITTER

HOUSE ID (1 SHOWN)

XMTR ID (32 SHOWN) UP = PULSE COUNT
— = INST. MODE

XMTR ID	DIP SWITCH POSITION		
	6	7	8
32	UP	UP	UP
33	UP	UP	—
34	UP	UP	—
35	UP	UP	—
36	UP	—	UP
37	UP	—	UP
38	UP	—	—
39	UP	—	—
40	—	UP	UP
41	—	UP	UP
42	—	UP	—
43	—	UP	—
44	—	—	UP
45	—	—	UP
46	—	—	—
47	—	—	—

5727 KEYPAD

HOUSE ID (1 SHOWN)

XMTR ID FIXED AT "00"

5715 UNIVERSAL TRANSMITTER

POS. 1: UP = NORMAL RESPONSE
DN = FAST RESPONSE

POS. 2: UP = NO COVER TAMPER
DN = COVER TAMPER (use N.C. setting)

5711/5711WM DOOR/WINDOW TRANSMITTER

HOUSE ID (1 SHOWN)

XMTR ID (33 SHOWN)

POS. 12: UP = N.O.
— = N.C. (Avoid ID 32-37 with N.O.)

5716 DOOR/WINDOW TRANSMITTER

IMPORTANT SET SWITCHES WITH BATTERY REMOVED

TERMINALS

POS. 6: UP = N.O.
DN = N.C.

TRANSMITTER ID	DIP SWITCH POSITION			
	6	5	3	2
1	—	UP	UP	UP
2	UP	—	UP	UP
3	—	UP	UP	UP
4	UP	UP	—	UP
5	—	UP	—	UP
6	UP	—	UP	UP
7	—	—	UP	UP
8	UP	UP	—	UP
9	—	UP	UP	UP
10	UP	—	UP	UP
11	—	UP	UP	UP
12	UP	UP	—	UP
13	—	UP	—	UP
14	UP	—	—	UP
15	—	—	—	UP
16	UP	UP	UP	UP
17	—	UP	UP	UP
18	UP	—	UP	UP
19	—	UP	UP	UP
20	UP	UP	UP	UP
21	—	UP	—	UP
22	UP	—	UP	UP
23	—	—	UP	UP
24	UP	UP	UP	UP
25	—	UP	UP	UP
26	UP	—	UP	UP
27	—	UP	—	UP
28	UP	UP	—	UP
29	—	UP	—	UP
30	UP	—	—	UP
31	—	—	—	UP
32	UP	UP	UP	UP
33	—	UP	UP	UP
34	UP	—	UP	UP
35	—	UP	UP	UP
36	UP	—	UP	UP
37	—	UP	—	UP
38	UP	UP	—	UP
39	—	—	UP	UP
40	UP	UP	UP	UP
41	—	UP	UP	UP
42	UP	—	UP	UP
43	—	UP	—	UP
44	UP	UP	—	UP
45	—	UP	—	UP
46	UP	—	—	UP
47	—	UP	—	UP
48	UP	UP	UP	UP
49	—	UP	UP	UP
50	UP	—	UP	UP
51	—	UP	UP	UP
52	—	UP	—	UP
53	—	UP	—	UP
54	—	UP	—	UP
55	—	UP	—	UP
56	—	UP	UP	UP
57	—	UP	UP	UP
58	—	—	UP	UP
59	—	—	UP	UP
60	—	—	UP	UP
61	—	—	UP	UP
62	—	—	UP	UP
63	—	—	—	UP

BIT VALUE: 1 2 4 8 16 32

For 5700 series transmitters not shown in this table, refer to the instructions accompanying each transmitter.